
Quick Start Guide



DIGITAL CAMERA VQ5020



• VQ5020 Name of Parts

The following illustrations show the names of each component, button, and switch on the camera.

1. Shutter Button
2. Power (ON/OFF) Button
3. Flash
4. Indicator Lamp
5. Lens
6. Microphone
7. Focus Switch
8. USB Port Terminal & TV Out Terminal
9. Function Switch
10. Power Lamp
11. Strap Eyelet
12. Buzzer
13. MENU Button



▼/MODE: Down/Mode

▲/⚡: Up/Flash

◀/[]: Left/Zoom Out

▶/[]: Right/Zoom In

14. DELETE Button
15. Joystick
16. TFT (panel)
17. Tripod Socket
18. SD Card Socket
19. Battery Compartment Cover

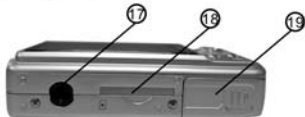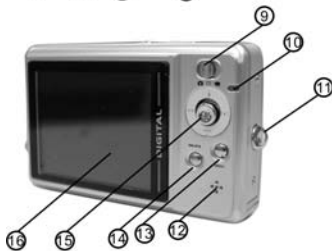

Indicators

1. Indicator Lamp
2. Self-Timer Lamp
3. Power Lamp
4. Flash

Digital Interface:

USB 1.1

Video Output:

TV out in NTSC / PAL



DIGITAL ZOOM

During shooting, push the joystick left or right to zoom in and zoom out.

Display Button

 
Press the **joystick** and the current information on the TFT will be displayed.

Menu Button

You can turn the menu ON or OFF by pressing the **Menu** button. As menu turn on, the items appear, Push the joystick up or down to select the item, and then press the joystick to enter the submenu. Push the joystick up or down to select the item and press the joystick to confirm.


• Display Information

Capture Status

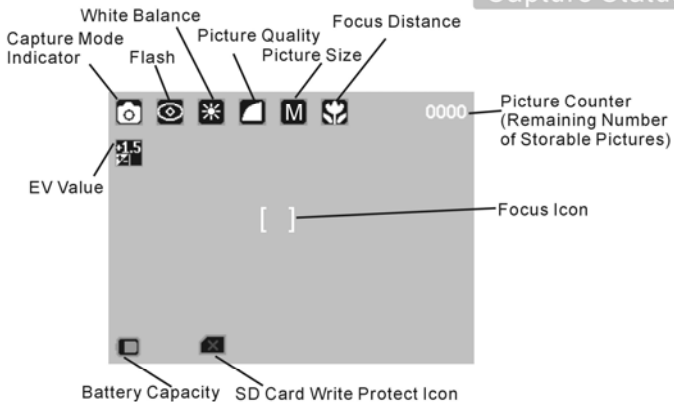

File Type

Frame Number/Total Number of Pictures

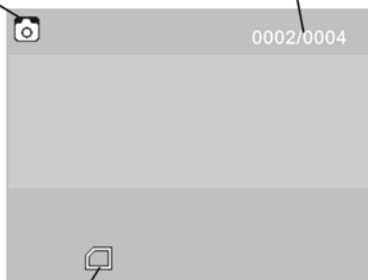

Playback Status

• Getting Ready

1. Slide open the battery compartment cover.
2. Load the batteries into the **VQ5020**.
3. Slide close the battery compartment cover.
4. Load the SD card (Optional) into the **VQ5020**.




• To insert an SD card:

1. Turn the **VQ5020** off.
2. Position the card as shown. Push the card into the slot until it hooks up.
3. To remove the card gently push the card until it get released from the hooking mechanism. After it has popped out pull it out completely.




• Taking a Picture

1. Turn on the **VQ5020**.
2. Slide the **Function** switch to  (Capture Status).
3. Point the **VQ5020** at the subject, use the TFT to compose the picture.
4. Hold the **VQ5020** still, gently press the shutter button to take a picture.




• Reviewing a Picture

1. Turn on the **VQ5020**.
2. Slide the **Function** switch to  (Playback status).
3. Push the joystick up or down to scroll through the pictures or videos on the TFT.



• Deleting a Picture

1. Turn on the **VQ5020**.
2. Slide the **Function** switch to  (Playback Status).
3. Push the joystick up or down to display the picture you want to delete.
4. Press the **DELETE** button to turn on the menu, and then push the joystick up or down to select **[DeleteOne]** on the screen. Press the **joystick** button to confirm.

The VistaQuest Corporation is proud that you have chosen its product and hopes you will enjoy sharing “a clearer vision” of your memories and special moments captured with your new camera with friends and family for many years.