
Quick Start Guide



DIGITAL CAMERA VQ615




Note: The camera supports SD card only

For customers in North and South America

For customers in USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

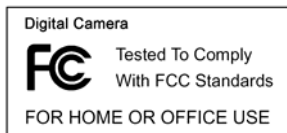

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

For customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection.
"CE" mark cameras are intended for sales in Europe.

Name of Parts


The following illustrations show component list, button, and switches on the camera.

1. Shutter (OK) Button
2. Power Button
3. Self Timer Lamp
4. Flash
5. Viewfinder
6. Strap Eyelet
7. Lens
8. Charge Indicator
9. Power Lamp
10. Function Switch
11. Buzzer
12. MENU Button
13. Battery Compartment Cover & SD Card Socket
14. Arrow pad
- ▶/⚡: Flash
- ◀/□: Display
- ▲/[↑↓]: Zoom In
- ▼/[↑↓]: Zoom Out
15. Mode Button
16. LCD monitor
17. USB Port Terminal
18. Tripod Socket



Indicators

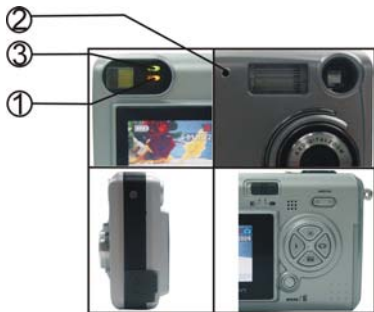

1. Indicator Lamp (Green)
2. Self-Timer Lamp (Red)
3. Power Lamp



Digital Interface:

USB 1.1





DIGITAL ZOOM

During shooting, user can push  and  to zoom in and zoom out.


Display Button

Press the **Right** button and the current information will be showed on the LCD monitor will be displayed.


Menu Button

You can turn the menu ON or OFF by pressing **Menu** button. As menu turn on, the items appear, use the  and  button to select and press the  or  button to enter each menu item.



Display Information

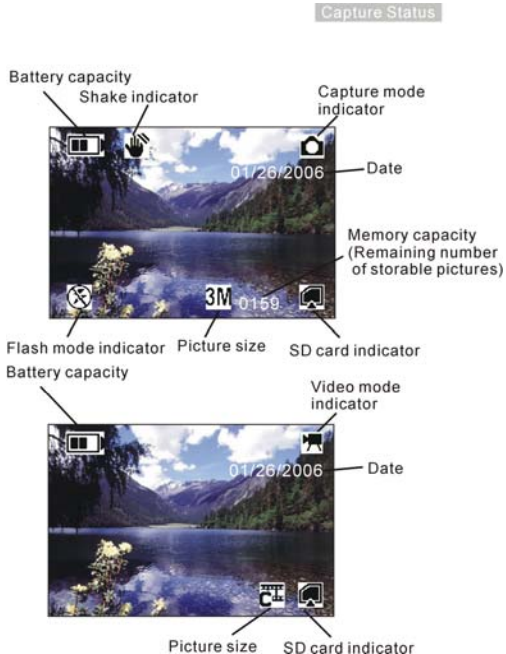

Note:

If the  icon appears on the LCD when you take pictures in low light condition. Please keep your hands steady, otherwise you may capture a blur picture.

Playback Status

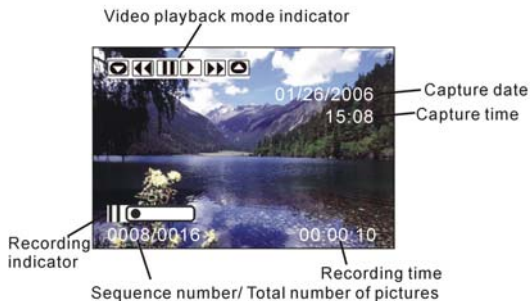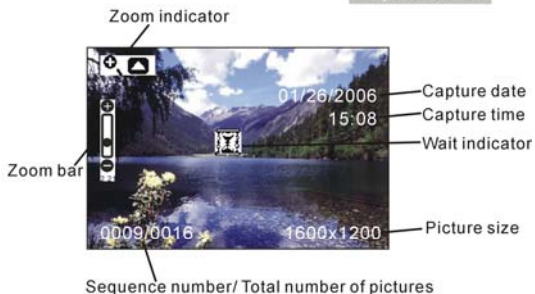

Press [] or [] to switch the video playback modes

◀◀ Reverse

|| Pause

▶ Play


▶▶ Fast forward

• Getting Ready

1. Slide open battery compartment cover
2. Load batteries and the SD card into the camera.
3. Slide and close battery compartment cover.



• Taking a Picture

1. Turn on the camera.
2. Slide **Function** switch to  (capture status).
3. Point the camera to the object, use the viewfinder or LCD screen to form the picture.
4. Holding the camera still, gently press the shutter button to take a picture.






• Reviewing a Picture

1. Turn on the camera.
2. Slide **Function** switch to  (playback status).
3. Use ◀ or ▶ to scroll through the pictures or videos on the monitor screen.




• Deleting a Picture

1. Turn on the camera.
2. Slide **Function** switch to  (playback status).
3. Use ◀ or ▶ to display the picture you want to delete.
4. Press **Mode** button to turn on the menu and then use  and  to select **[Delete]** on the screen. Press **Shutter** button.
5. When the message “Delete this file?” shows on the screen, press **Shutter** button to delete the file; press **Menu** button not to delete this file; press **Mode** button to exit the menu.

• Downloading Images to Your Computer

For Windows 98/ME customers:

Please install VQ515 drive before connecting.

1. Slide the **Function** switch to  (Playback Function).
2. Then connect the camera to the computer with the included USB cable.
3. “USB Mass Storage drive” appears on the computer screen.

For Windows XP:

A dialogue box with options appears as shown on the Right side.

The options are Play, Find/Fix/Share Images.

Open folders to view files, take no action,

Copy images to a folder on my computer,

View a slide show of images, and etc.

Please select one of them and click on “OK”.



For Windows 2000/ME/98:

Double click on “My computer”, and then double click on Removable Disk (i:) in the DCIM files. (All the photos and videos are stored here).

5. Press “Ctrl+A” on the keyboard to choose all the photos/videos, then press “Ctrl+C” to copy photos, and then open a file in the computer, press “Ctrl+V” to paste the photos.

The VistaQuest Corporation is proud that you have chosen its product and hopes you will enjoy sharing “a clearer vision” of your memories and special moments captured with your new camera with friends and family for many years.